

GUIDELINES FOR THE INSTALLATION AND MAINTENANCE OF STEEL UNDER DISPENSER SUMP

IMPORTANT INFORMATION - FOLLOW ALL INSTRUCTIONS

- 1) The Dispenser Sump is designed to provide above grade containment for plumbing and piping connections located under the dispenser.
- 2) The Sump products shall only be assembled and installed by a qualified installer. The use of non-qualified personnel or any deviations from these recommended procedures could result in damage or leakage.
- 3) The installer shall ensure that all FEDERAL, PROVINCIAL & LOCAL codes are met prior to & during installation.
- 4) Inspect Dispenser Sump for any shipping damage. Do not use if damage is found.
- 5) Use mounting holes on Dispenser Sump for anchoring.
- 6) The Dispenser Sump shall be protected against damage from vehicular traffic.
- 7) The Dispenser Sump should be inspected on a regular basis to confirm that neither water nor stored product are accumulated therein.
- 8) The coating on the exterior surface of the sump should be examined at least once per year. Deterioration of the coating should be remediated by touch up or repainting at the owner's discretion without obliterating the affixed signage. All coating repairs should be in accordance with the manufacturer's coating instructions.
- 9) Should serious problem such as sump leakage or material deterioration, or loss of sump structural integrity occur, the authority having jurisdiction shall be alerted (in cases of leakage) and contact manufacturer.
- 10) Containment sump:
 - A. Type - Dispenser Sump
 - B. Containment rating - Flammable and Combustible liquid. At grade Use Only
 - C. Liquid rating - Automotive Fuels
 - D. Use Only OEM Recommended Fittings and AccessoriesAbove-noted points of consideration derived from Underwriters' Laboratories of Canada Standard